




HPA600

Multifunction Heater

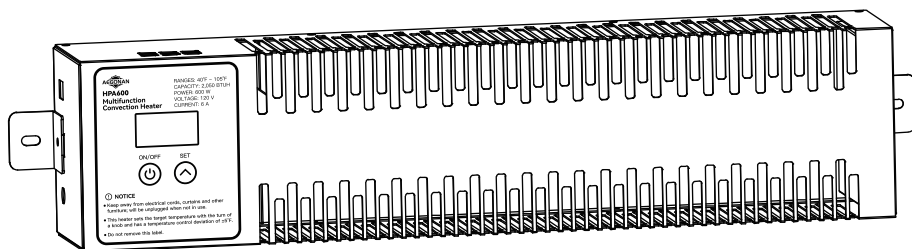

INSTALLATION & MAINTENANCE INSTRUCTIONS

Dear Owner

Thank you for purchasing this new heater manufactured by of Aegonan brand. You have made a wise investment selecting the highest quality product in the heating industry.

Please carefully read the installation and maintenance instructions shown in this manual. You should enjoy years of efficient heating comfort with this product from Aegonan products.

WARNING

Read Carefully – This instruction sheet contains vital information for the proper installation, use and efficient operation of the heater. Carefully read the manual before installation, operation or cleaning of the heater. Failure to adhere to the instruction could result in fire, electric shock, death, serious personal injury or property damage. Save these instructions and review frequently for continuing safe operation and instructing future users.

WARNING: HAZARD OF FIRE OR ELECTRICAL SHOCK

1. To prevent a possible electric shock, disconnect all power to heater at main service panel before wiring or servicing.
2. All wiring must be in accordance with the National and Local Electrical Codes and the heater must be grounded.
3. Do not install closer than 18" (456mm) to the floor or 12" (304mm) from the ceiling. End of heater may be next to adjacent walls. Do not install in vertical position.
4. Heater is hot when in use. Do not install the heater behind door, behind towel rack, in closet, where curtains or drapes can touch heater or where air flow through the heater may be obstructed. Keep electrical cords, bedding, furniture and other combustible away from heater.
5. Do not operate heater without cover in place. Cover must be secured with screws to prevent unintentional removal.
6. Do not insert or allow foreign objects to enter or touch the heater or heating element as this may cause an electric shock, fire or damage to heater.
7. Heater has hot and arcing or sparking parts inside. Do not use in areas where gasoline, paint, or flammable liquids are used or stored.
8. Do not use this heater in an environment where heater will be subjected to direct contact with water.
9. Do not use in a corrosive environment.
10. Supply voltage must be the same as heater voltage. Check heater nameplate and supply voltage before energizing.

SAVE THESE INSTRUCTIONS

GENERAL

The HPA600 Multifunction Heater is designed for horizontal wall mounting only. The built-in thermostat allows for adjustment of the heat output from 40°F to 105°F. The heater is factory wired for use at 120 volts.


Capacity: 2050 Btu/H, Power: 600w, Current: 6A

WARNING


Once the heater is installed and powered on, it can be turned on or off with a switch button. Then according to the actual environment, by adjusting the button to set the required temperature.

INSTALLATION

1. Open the accessory bag and take out the two L-shaped fixings and attach them to both sides of the heater with screws.

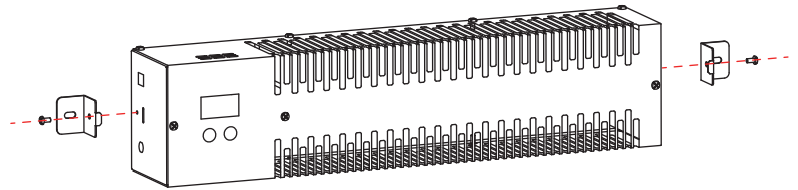



2. Position the heater on wall at desired mounting location maintaining the minimum clearances as noted in Warning 1 and as shown in Figure 1.

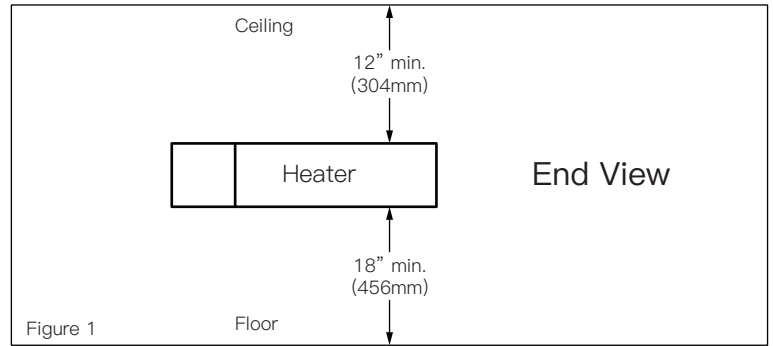


NOTE: The heater must be mounted horizontally to allow air flow freely upward through the heating element. Thermostat can be located towards either end of heater.

CLEANING AND MAINTENANCE

This heater requires no maintenance. Periodic cleaning to remove accumulated dust and dirt is recommended. This should be done using a vacuum with brush.

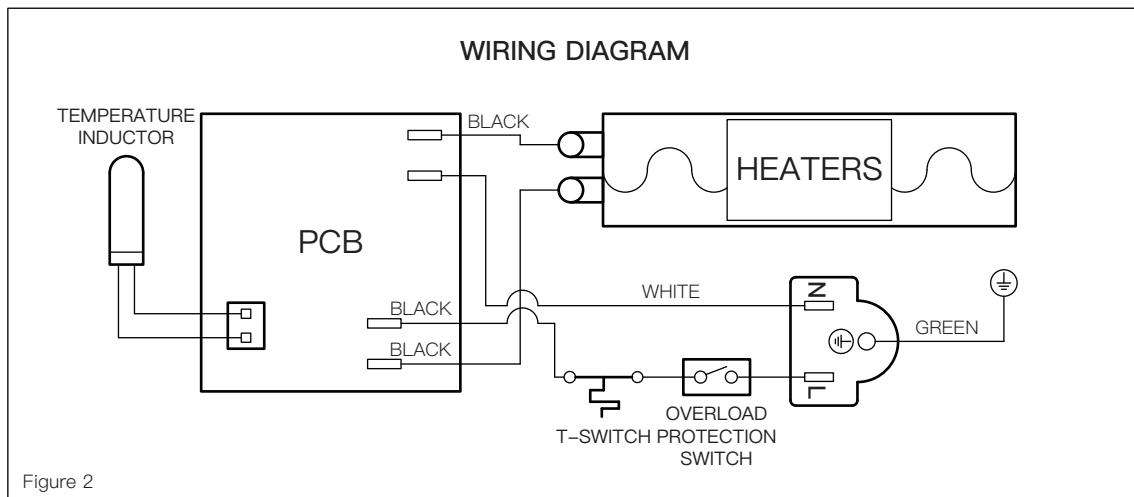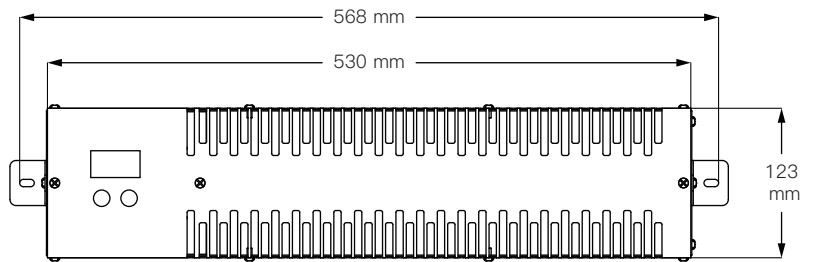

OPERATION

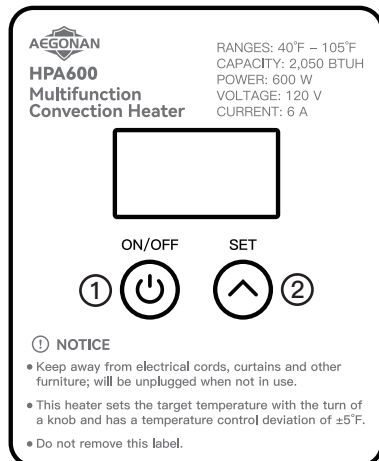

① Power Button:

Click to power on or off the heater.

② Temperature Setting Button:

When the heater is on, click the “SET” button to enter the temperature setting state, each time you click the “SET” button to increase the preset temperature by 5°F, the range is 40°F–105°F. When the number on the screen reaches your expected temperature, stop the operation for three seconds to complete the temperature setting.

If the ambient temperature is lower than the preset value, the heater will start to heat up.